


REMOVAL


1. Remove the shift lever knob & boots (A) pull both of it up.

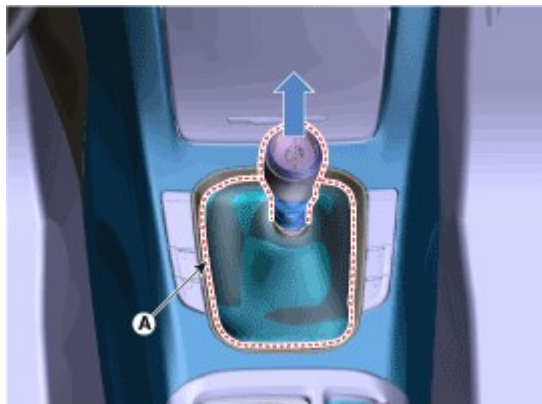


2. Remove the floor console assembly.
(Refer to Body - "Floor Console")
3. Remove the snap pin (A).



4. Remove the clip, in the shape of a "U"(B), from the cable end by spreading it towards both sides.

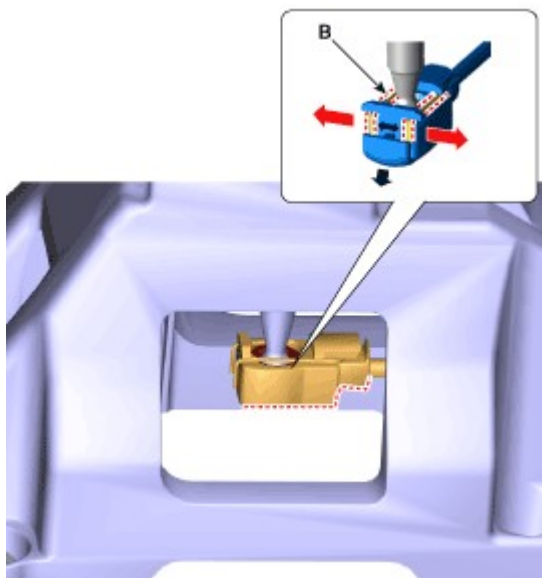


5. Disconnect the shift cable (A).
6. Disconnect the select cable (B).

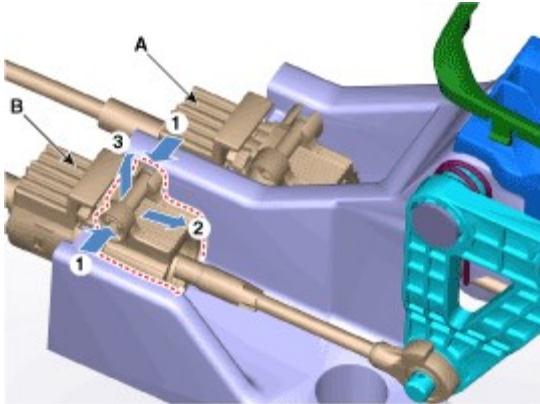

7. Remove the shift lever assembly (A) after removing the bolts.

Tightening torque :

8.8 - 13.7 N.m (0.9 - 1.4 kgf.m, 6.5 - 10.1 lb-ft)

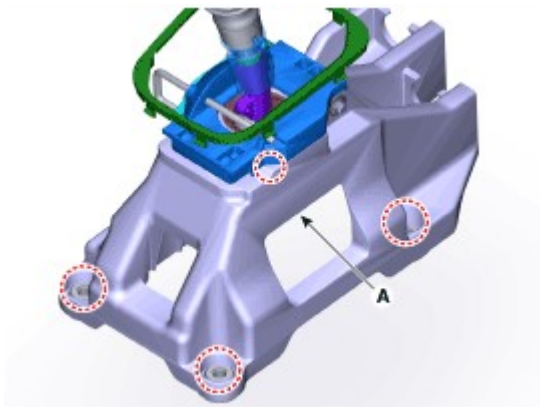


INSTALLATION

1. To install, reverse the removal procedure.

CAUTION

- New shift lever assembly is mounted in the 4th fixing pin.
After installation, remove the 4th fixed pin.
- After installing the select cable and shift cable socket, check portion (A) to see if it projects outwards from the cap.

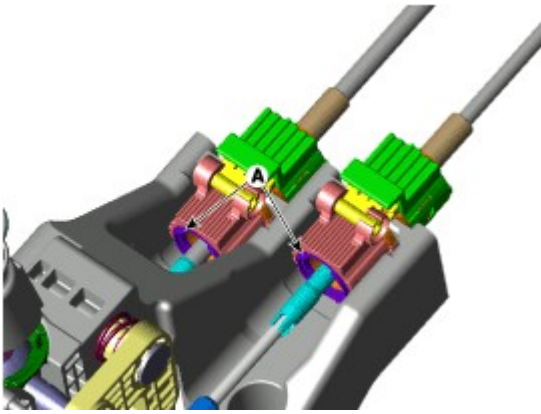

- Check operating of lever of transaxle side when operating shift lever after assembly. (1-6,R)
- If there is sticky feel, adjust the control cable length again.
(Refer to Control Cable - "Installation")